


**WIRING DIAGRAMS**

**CB750F**

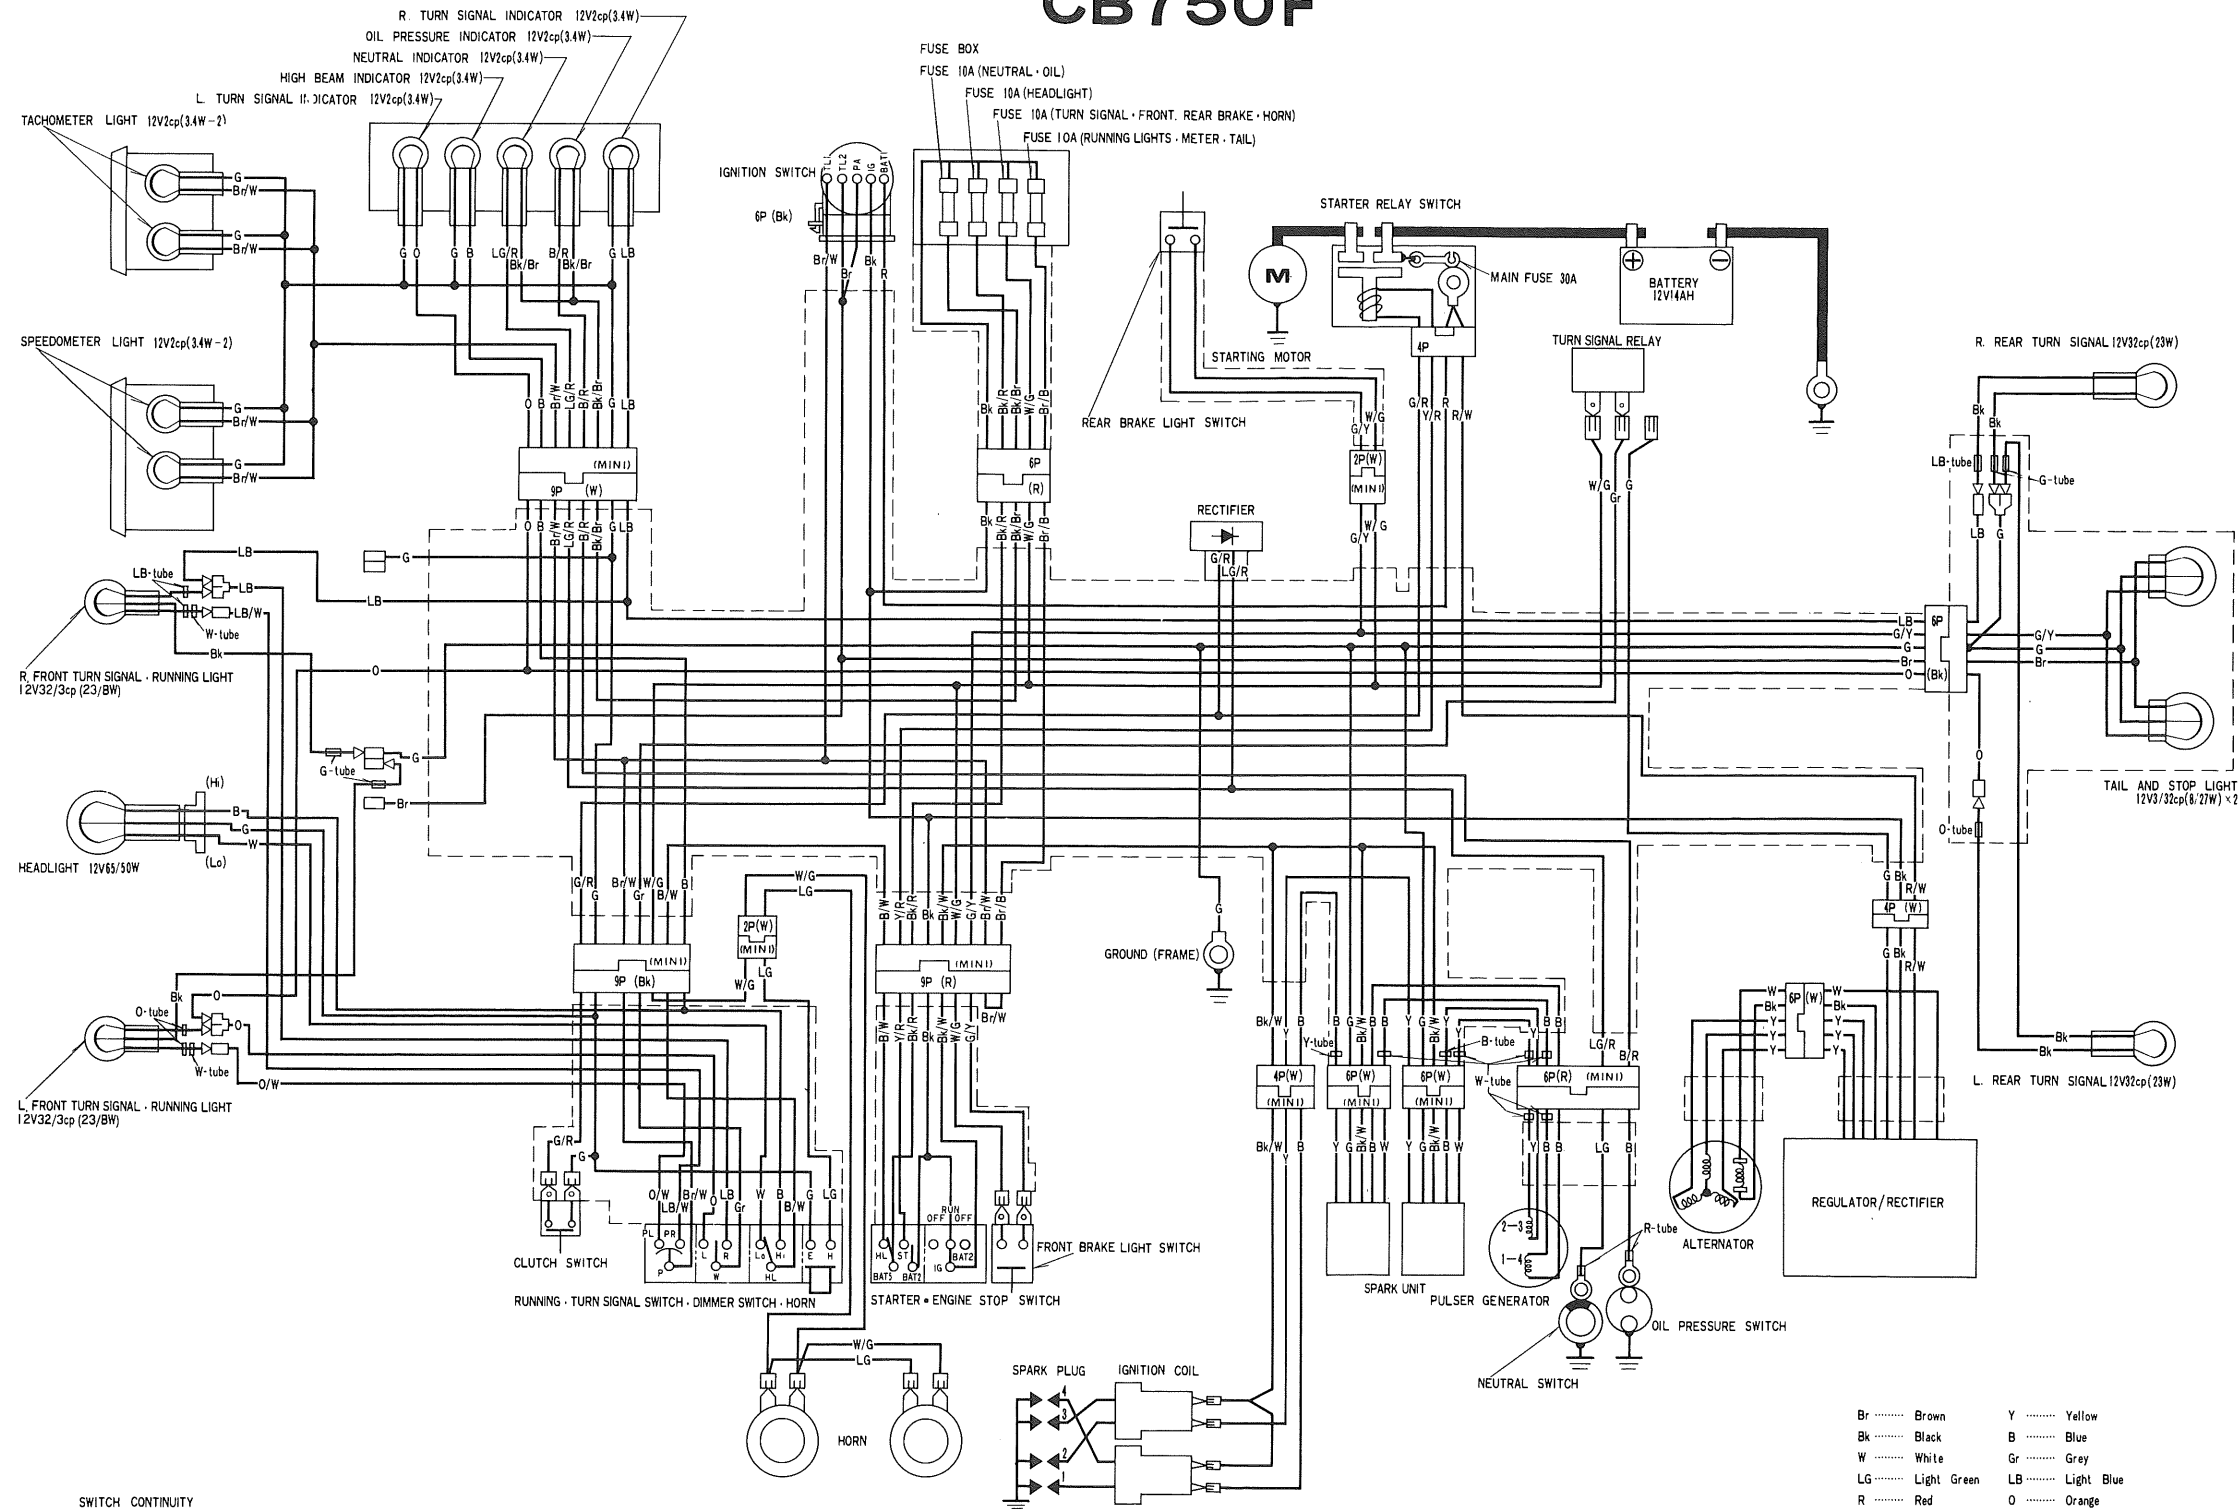

**SWITCH CONTINUITY**

| IGNITION SWITCH |    |     |     |   | STARTER SWITCH |    |      |    | ENGINE STOP SWITCH |    | TURN SIGNAL SWITCH |   |   |   |    | DIMMER SWITCH |     |    | HORN SWITCH |      |      |
|-----------------|----|-----|-----|---|----------------|----|------|----|--------------------|----|--------------------|---|---|---|----|---------------|-----|----|-------------|------|------|
| BAT1            | IG | TL1 | TL2 | P | BAT3           | HL | BAT2 | ST | BAT2               | IG | W                  | R | L | P | PR | PL            | HL  | Lo | Hi          | FREE | PUSH |
| OFF             |    |     |     |   | FREE           |    |      |    | OFF                |    | R                  |   |   |   |    |               | Lo  |    |             |      |      |
| ON              | ○  | ○   | ○   | ○ |                |    |      |    | RUN                |    | N                  |   |   |   |    |               | (N) |    |             |      |      |
| P               | ○  |     |     |   |                |    |      |    | OFF                |    | L                  |   |   |   |    |               | Hi  |    |             |      |      |

- Br ..... Brown
- Bk ..... Black
- W ..... White
- LG ..... Light Green
- R ..... Red
- G ..... Green
- Y ..... Yellow
- B ..... Blue
- Gr ..... Grey
- LB ..... Light Blue
- O ..... Orange
- P ..... Pink

0030Z-445-6700