


WIRING DIAGRAMS

CB750K

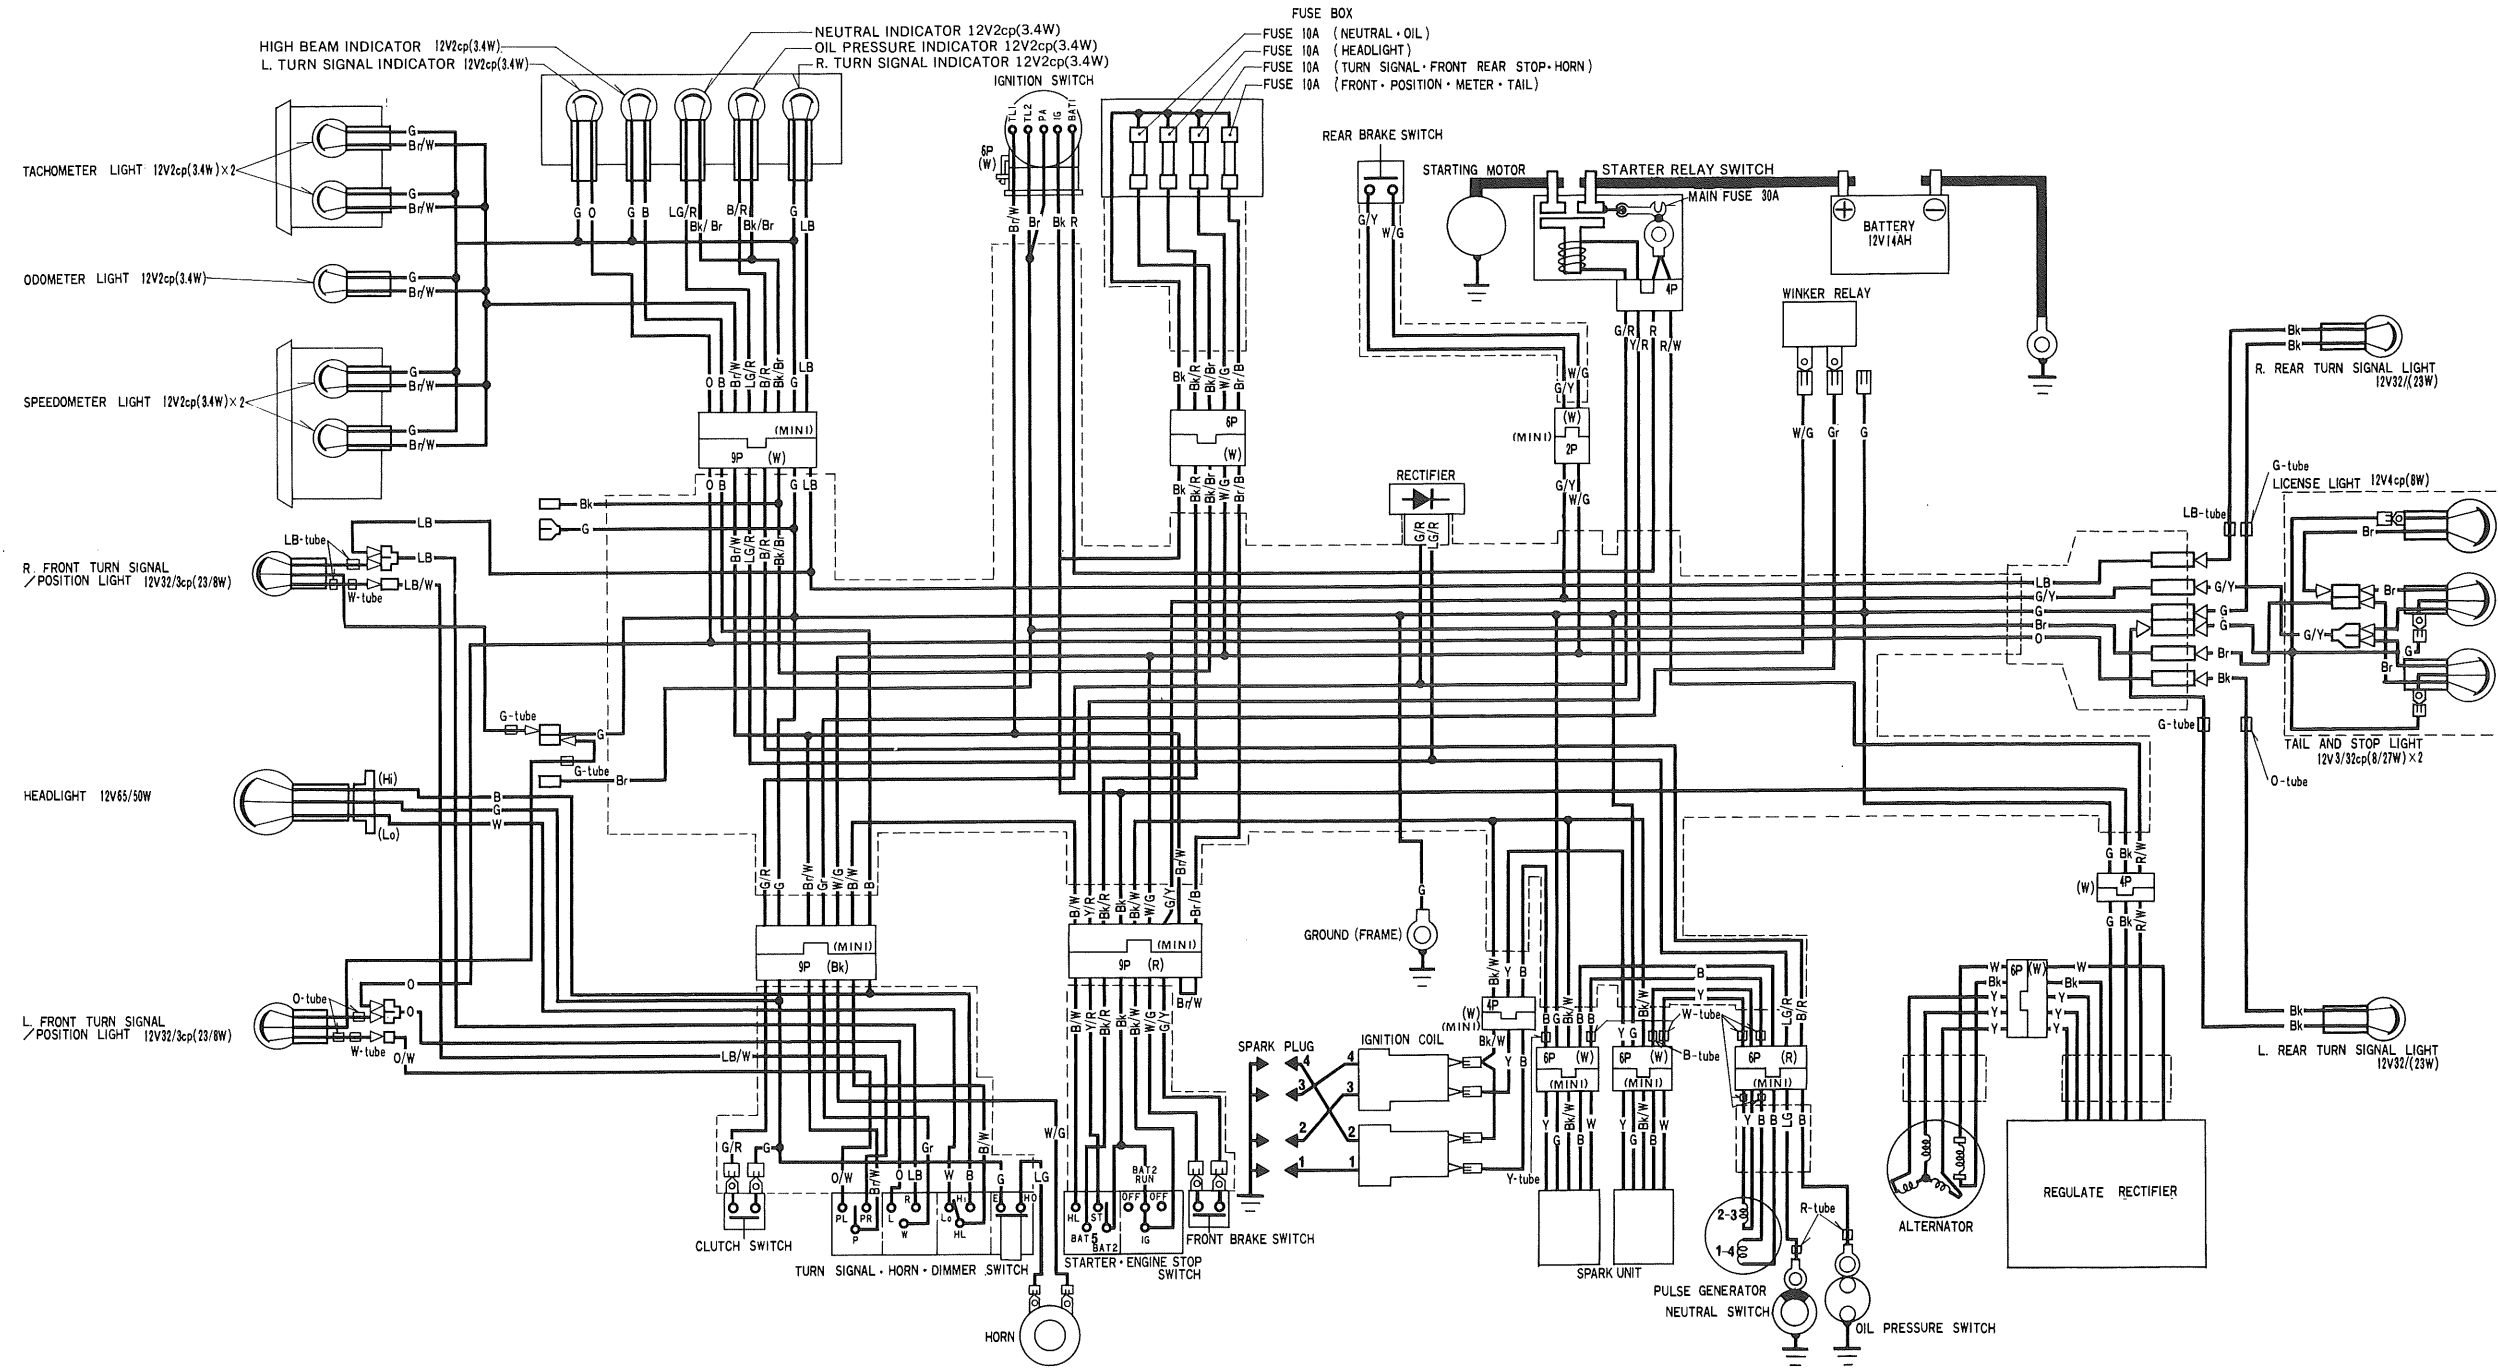

SWITCH CONTINUITY

IGNITION SWITCH					
	BAT1	IG	TL1	TL2	P
OFF					
ON	○	○	○	○	○
P	○				○

STARTER SWITCH				
	BAT1	HL	BAT2	ST
FREE	○	○		
PUSH			○	○

ENGINE STOP SWITCH	
	BAT2 IG
OFF	
RUN	○
OFF	

TURN SIGNAL SWITCH						
	W	R	L	P	PR	PL
R	○					
N						
L			○			

DIMMER SWITCH			
	HL	Lo	Hi
Lo	○		
(N)			
Hi			○

HORN SWITCH		
	HO	E
FREE		
PUSH	○	

- Br Brown
- Bk Black
- W White
- LG Light Green
- R Red
- G Green
- Y Yellow
- B Blue
- Gr Grey
- LB Light Blue
- O Orange
- P Pink

0030Z-425-6700